



5/8 yd. (20 inches?) of fabric  
1 1/3 yd. strap webbing




- Use pinking shears on cut edges
- Sew cut edges twice
- Iron flat

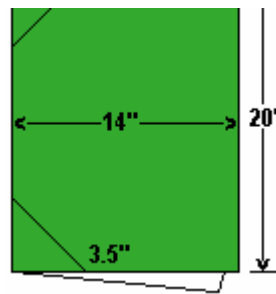

- Fold to match newly sewn seams, bringing bottom corners to a point
- Measure 3.5" from point draw straight line across both points
- Iron Flat

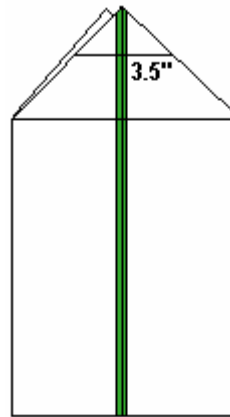

- Sew both points to bottom of bag
- Iron the bottom of the bag flat

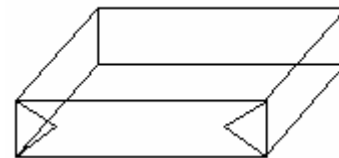

- Measure 14" from the ironed edge of the bottom of the bag
- Fold the top over and iron
- Turn ironed portion under and iron again
- Sew seam around top of bag, Iron flat
- Sew seam around the bottom edge of the top of bag, Iron flat
- Top stitch bottom of bag
- Fold as if folding a paper shopping bag; align sides so they lay as flat as possible
- Top stitch up sides from the bottom
- Attach straps next to the top stitched sides so bag still folds flat

